
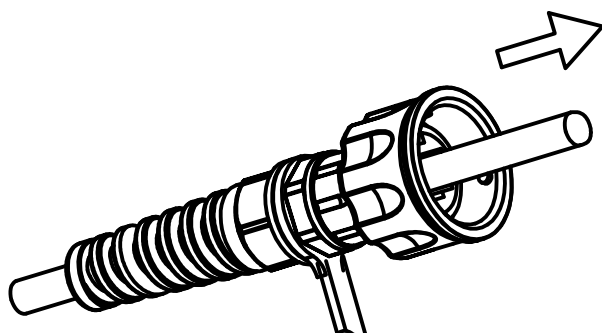


Industrial connector


INSTALLATION SHEET

UTP/FTP

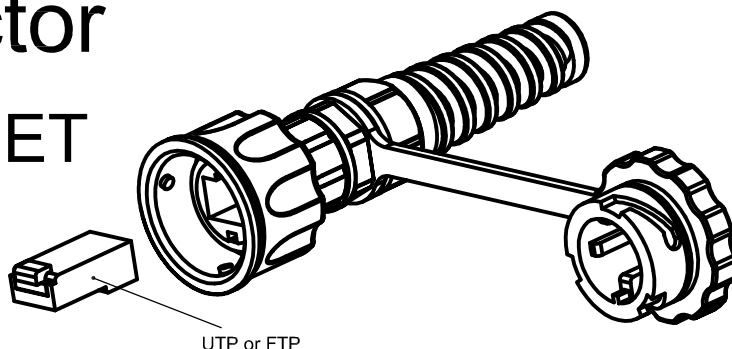



STEP 1:

Insert the wire through the parts as shown. Terminate the plug per the T568A/T568B wiring as required.

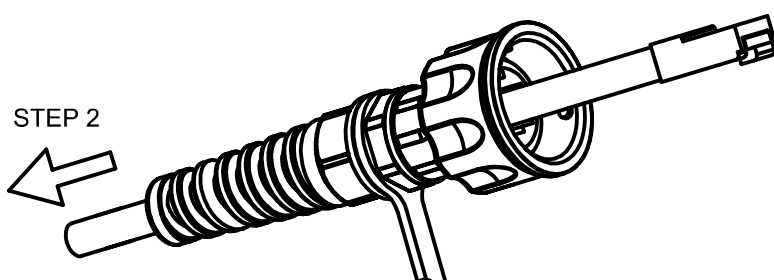

STEP 2:

Pull the plug back into the housing.

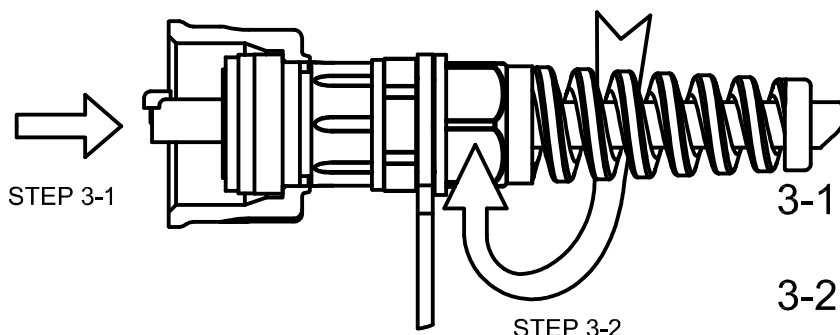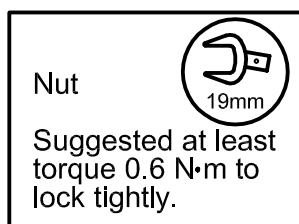

STEP 3:

- 3-1 Confirm that the plug is in the correct position.
- 3-2 Twist the back portion as shown in order to lock the cable Gland.