



## STEP 1:

Strip at least 1 inch of jacket off of the end of the cable.

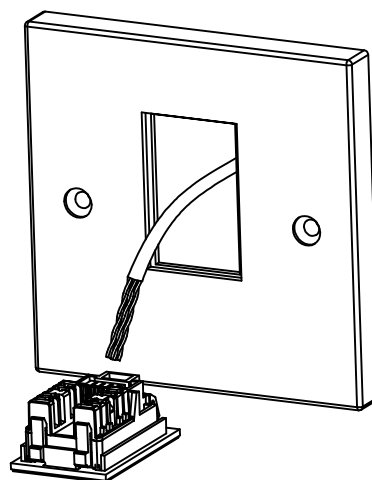


## STEP 2:

Insert the wires into the IDC's of the Jack according to the desired configuration (T568A/T568B)

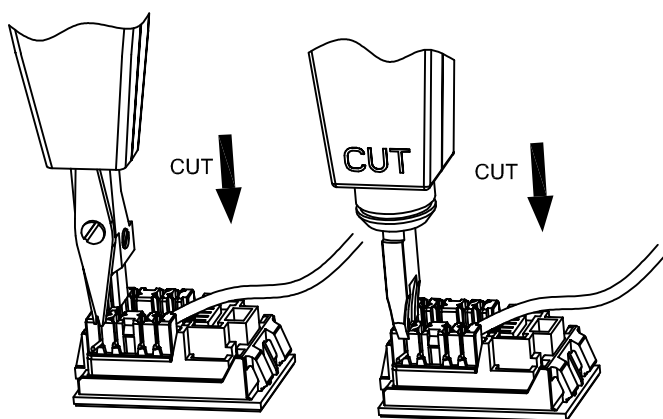

## STEP 3:

Terminate the wires using the punch down tool. Make sure the tool is set to trim excess wire as shown.

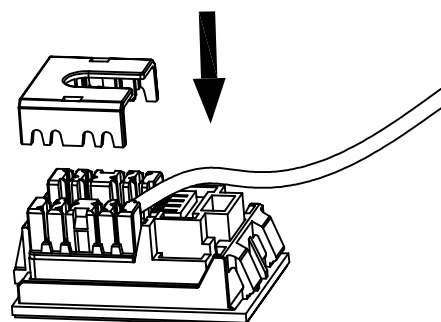

## STEP 4:

Place the termination cap onto the jack and press the cap to make sure it is fully seated.

## STEP 5:

Insert the jack into the face plate as shown until they snap on to each other tightly.

