



INSTRUCTION

STEP 1

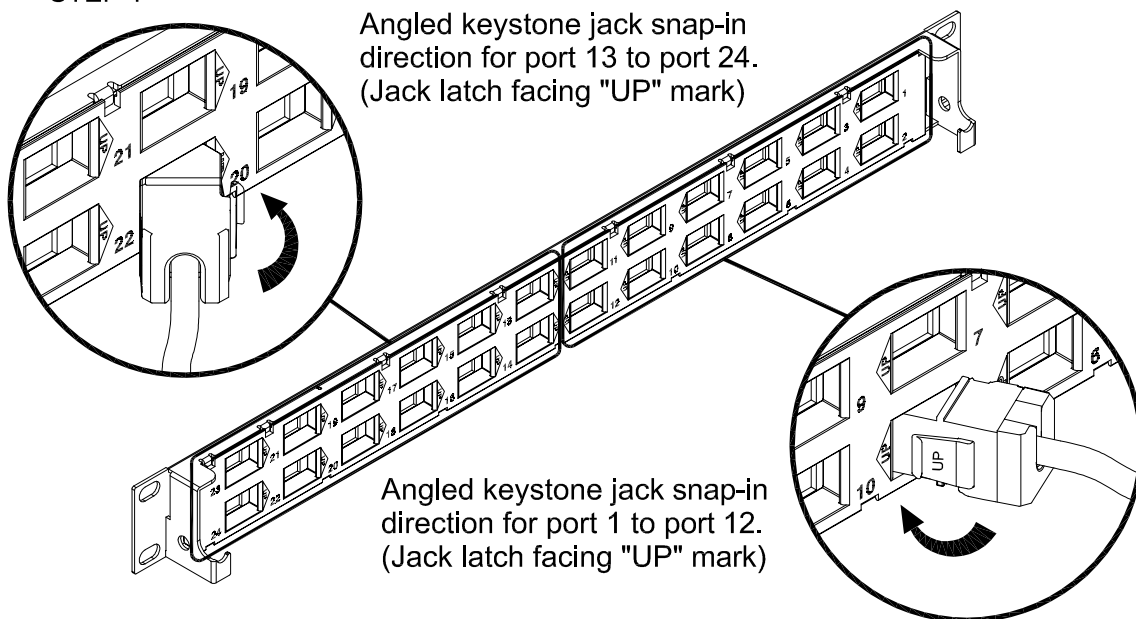


STEP 2

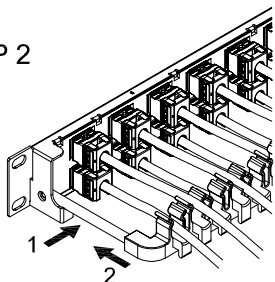


Slightly push the side bar of the cable management and insert it into the hole on the side of patch panel to complete the assembly.

STEP 3

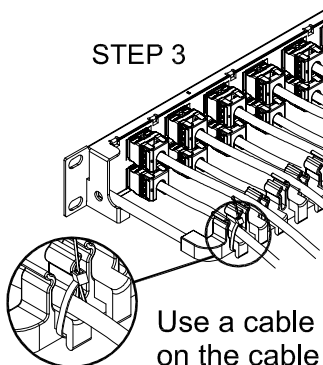

Use a cable tie to fix the cable on the cable management.

Port 1 to port 12 jack openings are facing to the left.

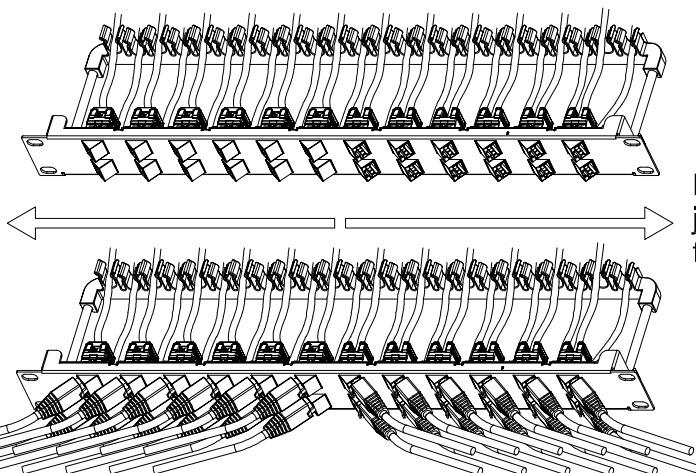

Port 13 to port 24 jack openings are facing to the right.

Port 1 to port 12 ← Patch cords routing → Port 13 to port 24