


STEP 1:

Strip off at least 1 inch of jacket from end of the cable.

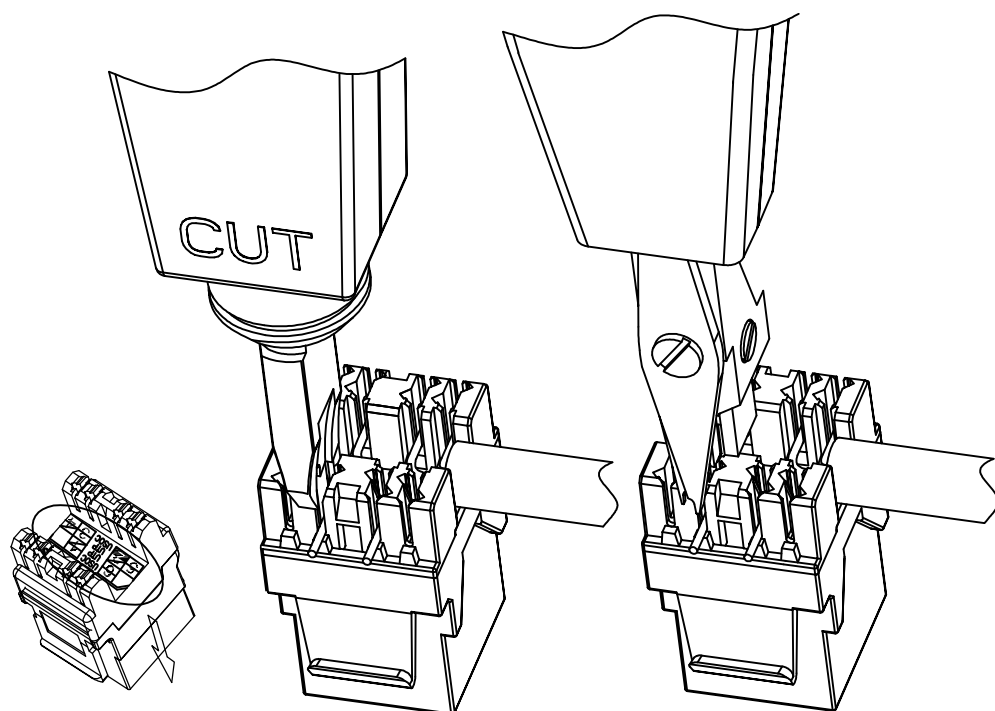


6	USOC	1
5	UTP	3
2	UTP	4
3	USOC	

wiring label

	USOC	UTP
1	WT	WT/GN
2	BK	WT/OG
3	RD	BU
4	GN	WT/BU
5	YL	OG
6	BU	GN


STEP 2:

Insert wires into the IDC according to the wiring label.
Terminate wires by punch down tool. Make sure the tool trims the exceeded wires as shown.

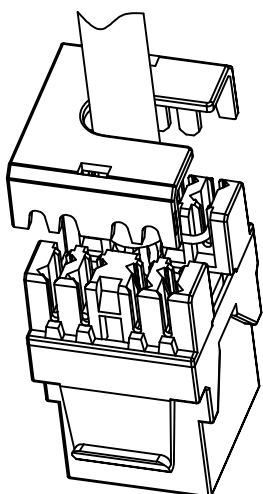

STEP 3:

Place termination cap onto the jack and press the cap to make sure it's fully covered.

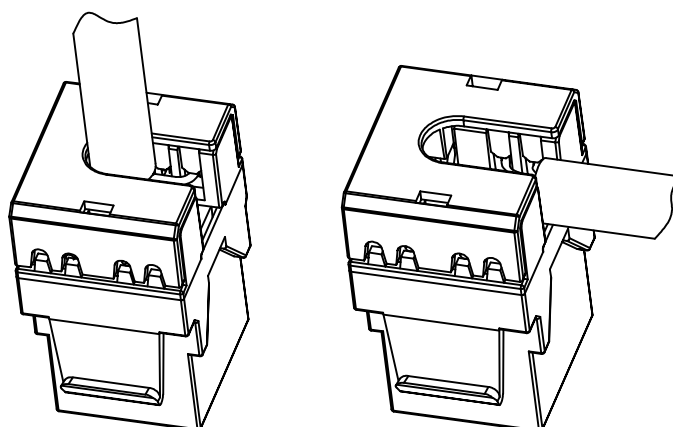

STEP 4:

Flatly lays down the cable for an appropriate position.