
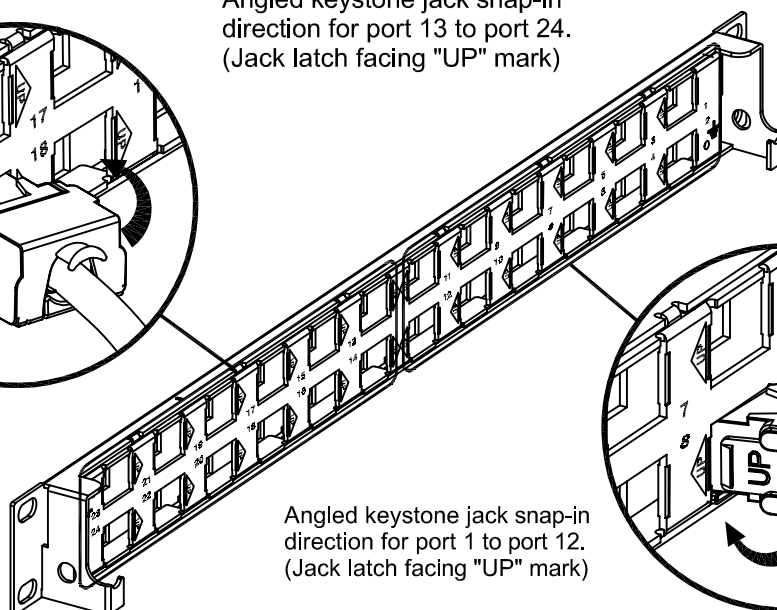



INSTRUCTION

STEP 1


Angled keystone jack snap-in direction for port 13 to port 24.
(Jack latch facing "UP" mark)

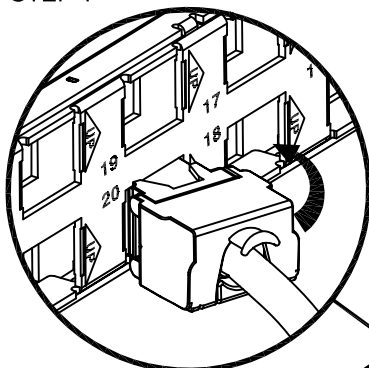

Angled keystone jack snap-in direction for port 1 to port 12.
(Jack latch facing "UP" mark)

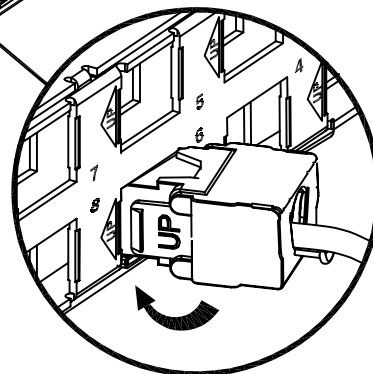


STEP 2

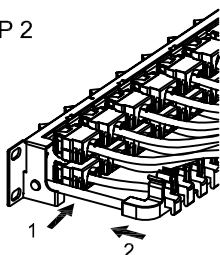


Slightly push the side bar of the cable management and insert it into the hole on the side of patch panel to complete the assembly.

STEP 3

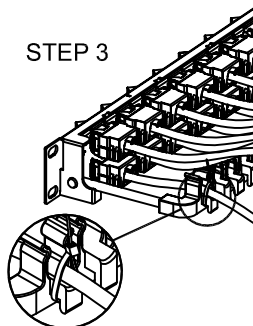


Use a cable tie to fix the cable on the cable management.

STEP 4

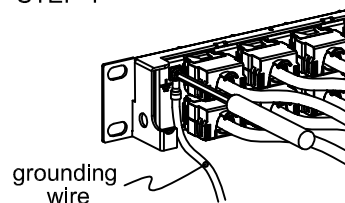

Screw the grounding wire to one of the two grounding lugs on rear of panel properly .
(GROUNDING WIRE NOT INCLUDED).

Port 1 to port 12
jack openings are
facing to the left.

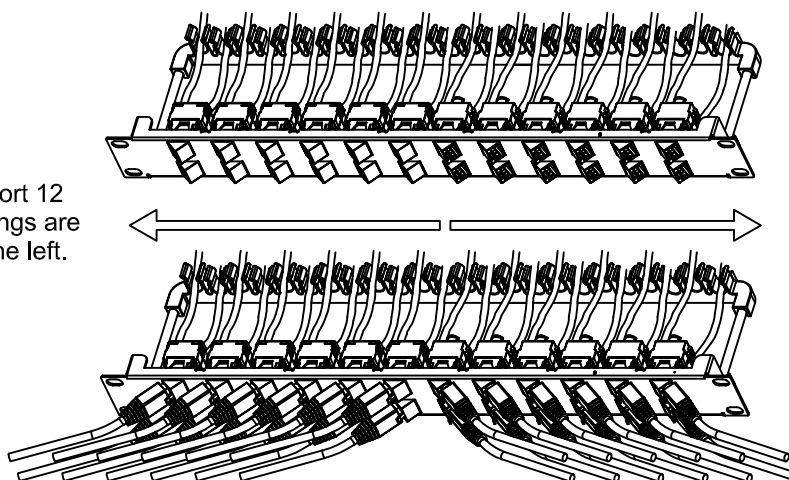

Port 13 to port 24
jack openings are
facing to the right.

Port 1 to port 12 ← Patch cords routing → Port 13 to port 24