



INSTRUCTION SHEET

1

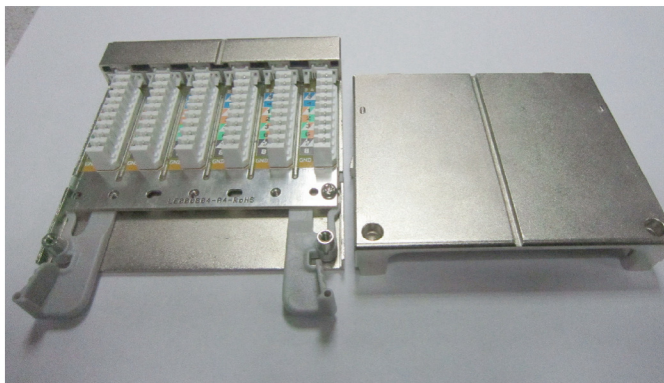

Remove the rear cover from the cassette and place the cassette on a sturdy surface.

2

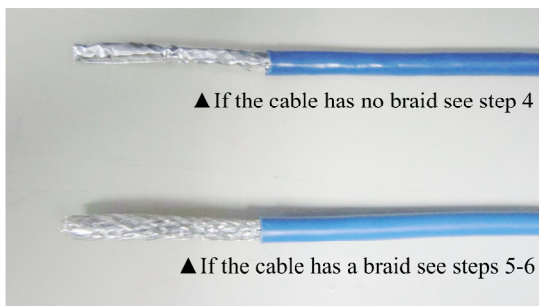


▲ If the cable has no braid see step 4

▲ If the cable has a braid see steps 5-6

Strip approximately 7.7cm (3 inches) jacket from the cable.
Be sure that the foil and/or braid remains intact.

3

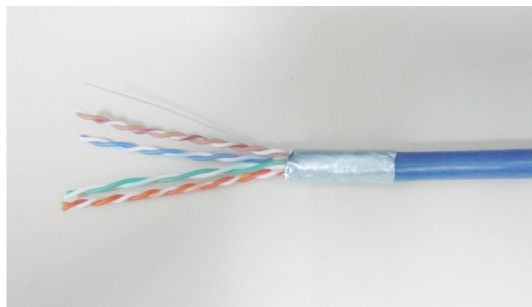


For cable with foil but no braid:
Fold the foil shield back over the jacket of the cable.

4




For braided cables:
Push the braid back over the jacket of the cable.

5

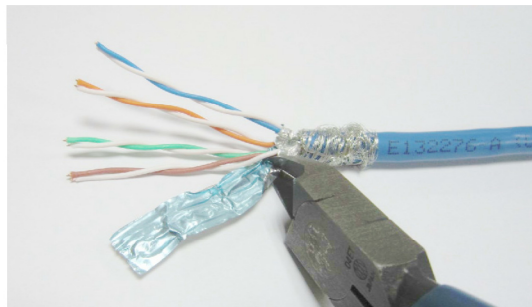


For braided cables:
Take off and cut off the foil of each pair.

6

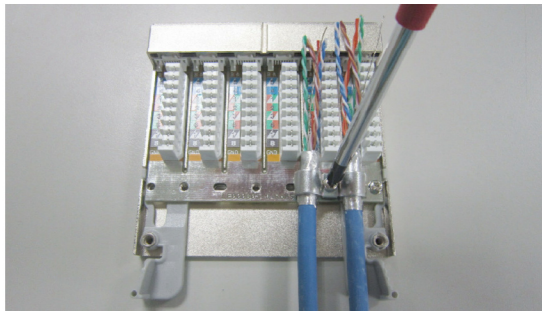


Insert the cable and attach the clip as shown.


Tighten the cable clip screw until it reaches the bottom.

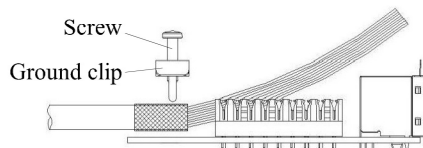



7

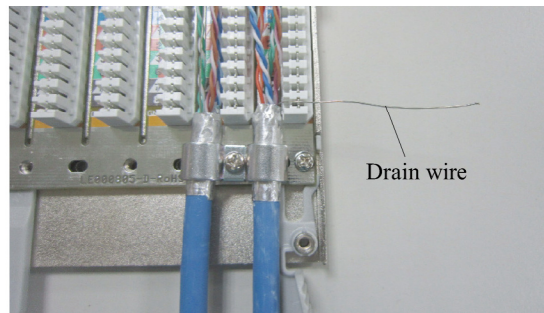

Insert the drain wire into the ninth slot (the slot with no color code) on the IDC connecting block as shown.

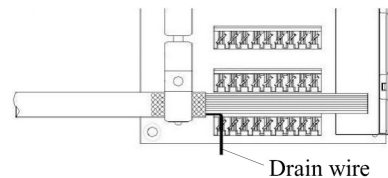


8

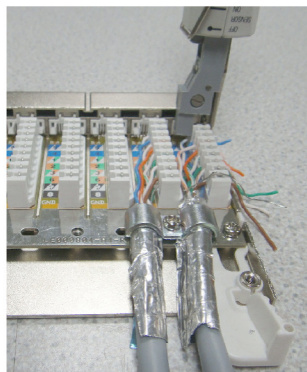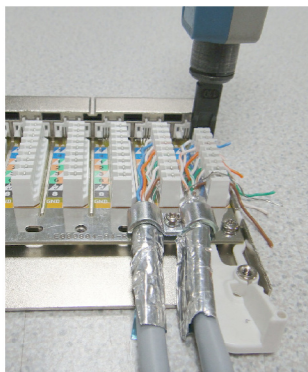

Install the wires into the IDC blocks according to the wiring position 568A/568B with 110/Krone punch down tool.

	B	A	
BL /W	5	BL /W	
BL	4	BL	
O/W	1	G/W	
O	2	G	
G/W	3	O/W	
G	6	O	
BR/W	7	BR/W	
BR	8	BR	
	GND		

9

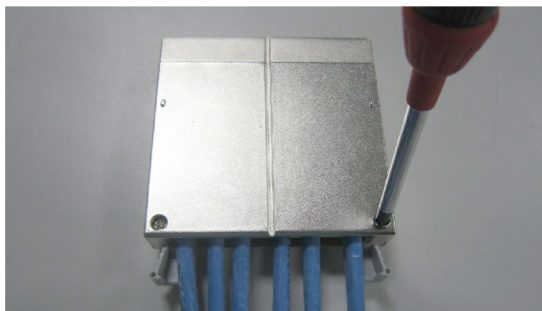

Put the rear cover into place and lock it into position by fastening the screw.