



INSTRUCTION SHEET

1

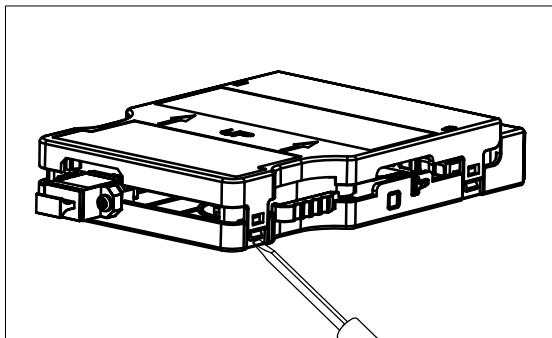


Open up cassette upper cover by flathead screwdriver.

2

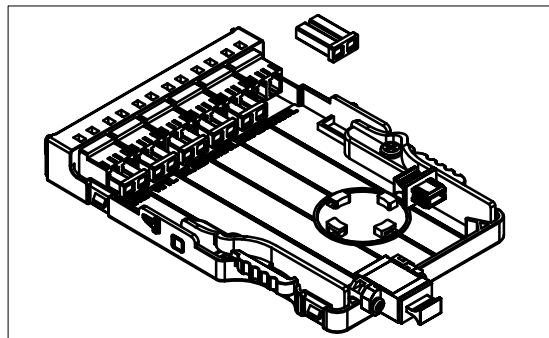


Remove LC and MPO Adapter dust cover.

3

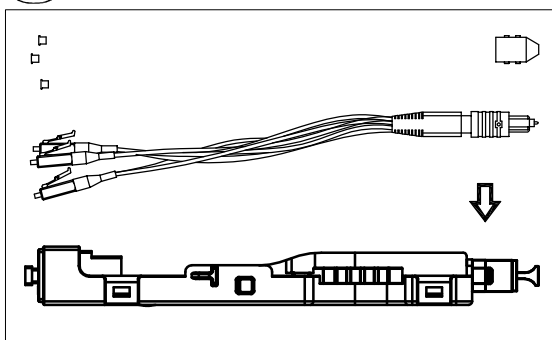


Connect the cable to MPO Adapter.

4

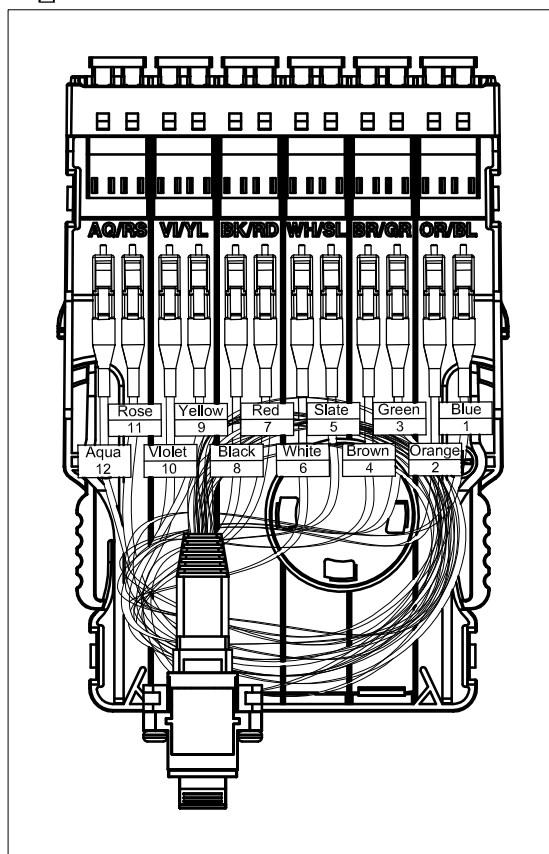

Insert LC Plug follows by engraved 12 color codes.

5

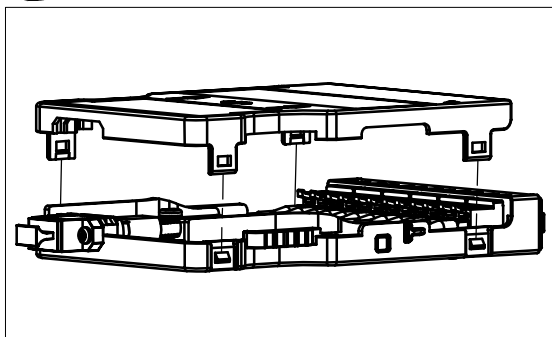

Close upper cover.