



# INSTRUCTION SHEET

1

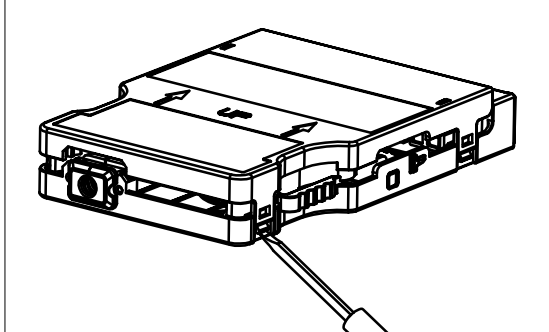


Open up cassette upper cover by flathead screwdriver.

2

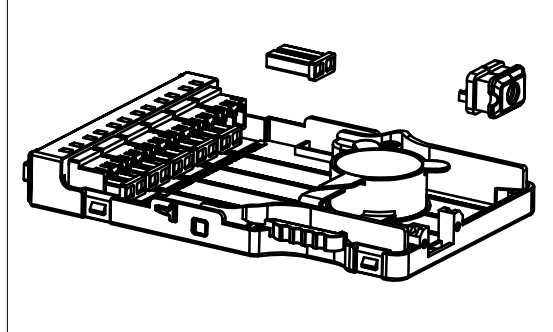


Remove LC dust cover and rubber gland.

3

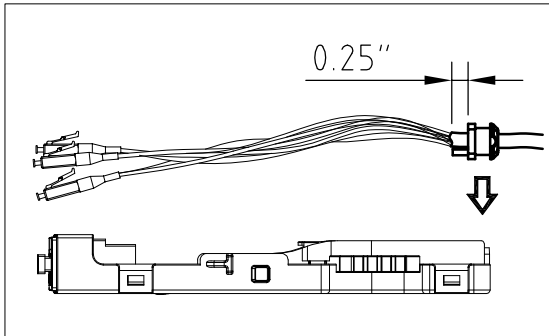


Put the cable on the rubber gland and leave cable jacket at least 0.25 inches.

4

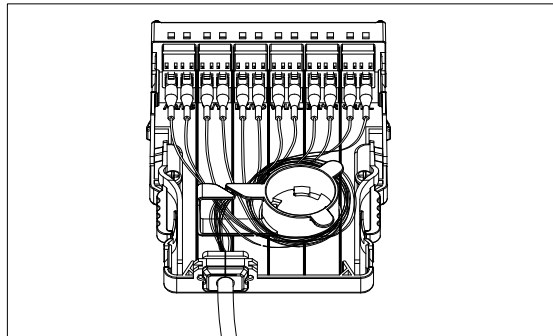


Manage the wire on the loop and wrap the cable in proper length.

5

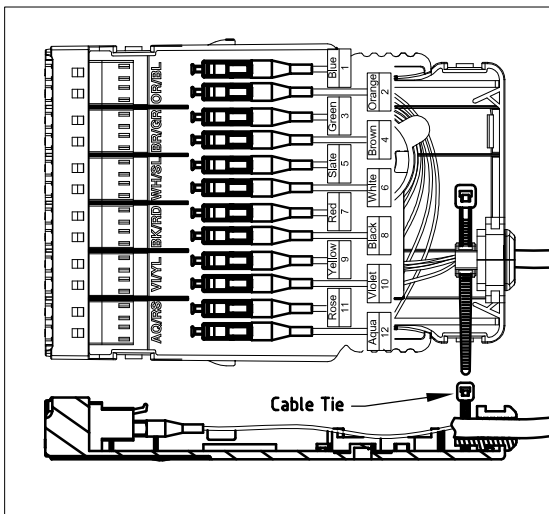

Insert LC Plug follows by engraved 12 color codes, then attach cable tie at arrow indicating position.

6

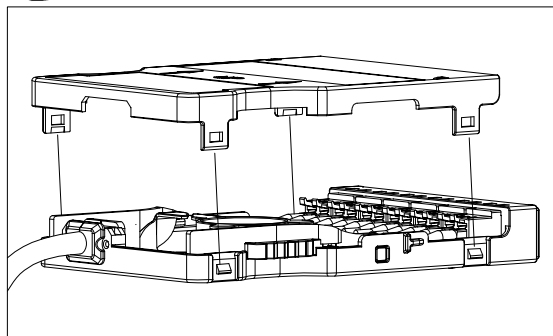

Close upper cover.