
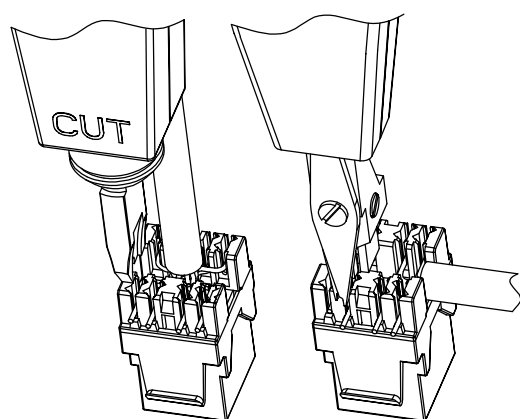



INSTRUCTION SHEET

Angled Patch Panel For Keystone Jack

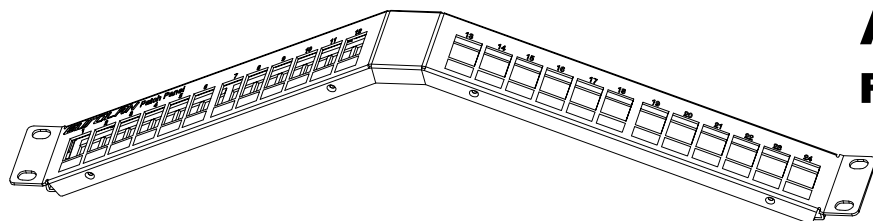



STEP 1:

Insert wires into IDC seat according to the wiring configuration (T568B/T568A). Terminate the wires with a punch tool, and trim off excess wires.

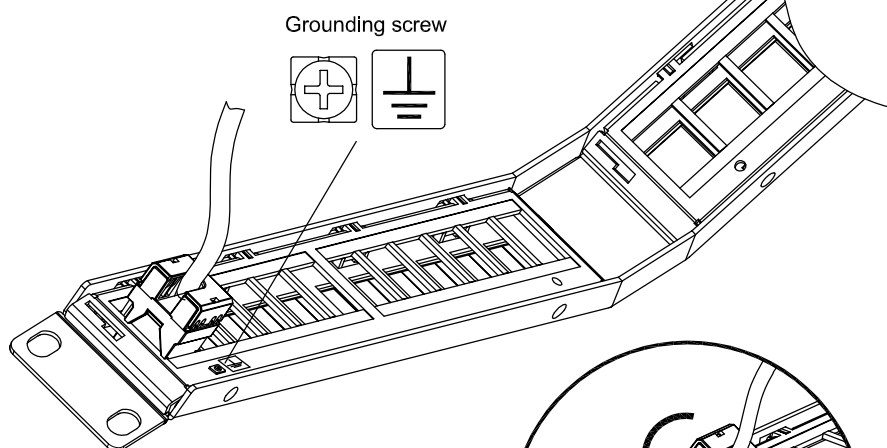


STEP 2:

Snap keystone jack into panel.

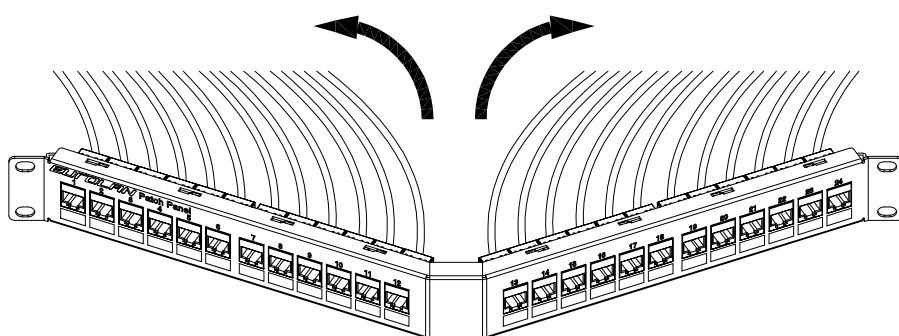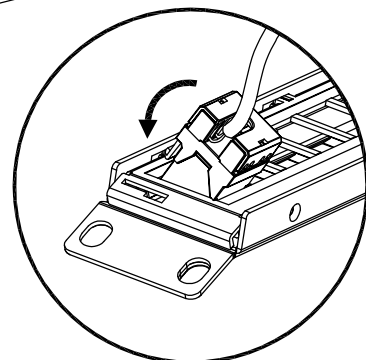

STEP 3:

Recommended cable routing in fan direction.

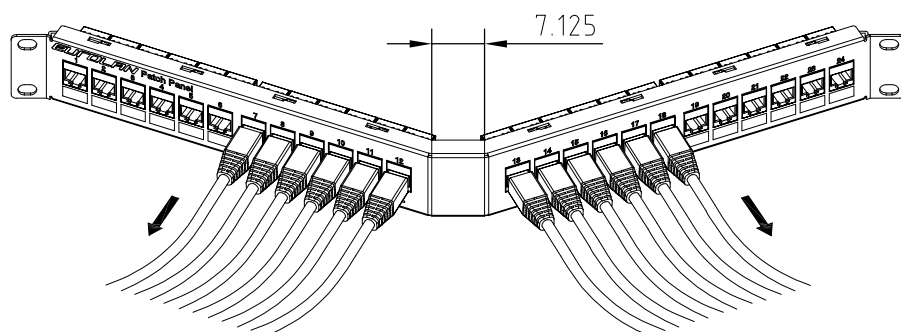

STEP 4:

Recommended routing for patch cords.